

P-64 Parts List

1. Frame
- 1a. Recoil Spring
2. Disconnecter
3. Sear Retaining Pin
4. Sear
5. Sear Plunger Spring
- 5a. Sear Plunger
6. Plunger Retaining Pin
7. Plunger Retaining Pin Screw
8. Hammer
9. Hammer Pin
10. Hammer Spring
11. Hammer Strut
- 11a. Strut Washer
12. Hammer Spring Pin
13. Mag Release
14. Trigger Guard Spring
15. Trigger Guard Plunger
16. Trigger
17. Trigger Guard
18. Trigger Guard Pin
19. Trigger Return Spring
20. Trigger Pin
21. Trigger Bar
22. Slide Stop Lever
23. Slide Stop Spring
24. Slide
25. Extractor Plunger
26. Extractor Spring
27. Extractor
28. Cartridge Indicator & Spring
29. Firing Pin Spring
30. Firing Pin
31. Indicator Lock
32. Safety Detent Spring
33. Safety Detent
34. Safety Catch
35. Left Panel Grip
36. Right Panel Grip
37. Grip Nut
38. Grip Screw
39. Magazine Spring
40. Magazine Body
41. Magazine Bottom
42. Magazine Follower





38



37



36



35



39



42



40



41